



Dart Aerospace Ltd.
1270 Aberdeen St
Hawkesbury, ON
K6A 1K7
Canada

Tel (613) 632-5200
Fax 613 632-5246

5

D412-664-443TRN
Job Sheet 185906



Part No: D412-664-443TRN

Job Qty: 1 ea

Part Name: Crosstube Turning Detail



Part Weight: 0 lbs

Status: New

Priority: Medium

Job Created: 11/6/18

Job Tracking No:

Due Date: 11/16/18

Created By: Jesse White

Type: Stock

Description:

Note: D412-664-443 REV.B IPP REV:A NEW ISSUE 13-09-26 JLM VERIFIED BY:DD

Ship Via:

Bill of Materials

Job Routing

Op No	Operation	Qty	Start Date	Due Date	Standard		Workcenter/Supplier		Sign-off
					Setup Hrs	Run Hrs	Workcenter / Supplier	Lead Time	
90	Start up Operation	1 Ea		11/16/18	0.00	0.00	Start Up Crosstubes-2		MD 2018-11-21
100	Mori Seiki	1 pcs		11/16/18	3.09	4.00	Mori Seiki TL-40		MD 2018-12-05
110	QC	1 pcs		11/16/18	0.00	0.00	QC2-3		MD 2018-12-05
120	Mori Seiki	1 pcs		11/16/18	0.00	4.00	Mori Seiki TL-40		MD 2018-12-05
130	QC	1 pcs		11/16/18	0.00	0.00	QC2-3		DAS 67
140	QC	1 pcs		11/16/18	0.00	0.00	QC8		DP2
150	Crosstubes	1 pcs		11/16/18	0.00	0.63	Crosstubes-2		PD 18-12-21
180	QC	1 pcs		11/16/18	0.00	0.00	QC5		DP2 18-12-21
190	Packaging	1 pcs		11/16/18	0.00	0.00	Packaging3-2		DP2 18-12-21
200	QC21-SA	1 Ea		11/16/18	0.00	0.00	QC21		DAS 21 DEC 21 2018

Part Op 100 - 1-Cut tube on chop saw, leave extra mat'l for facing and instal plugs 412-443 on both ends 2-Face both sides of Descriptions: tube to length. 3-turn tube on both sides using program #2000 as per folio FB216 4--turn tube on both sides using program #3000 as per folio FB216 FOLIO REV: B DWG REV: B 5-Blend transition lines using belt sander with 60 grit sand paper

120 - 1-Turn tube on both sides using program #4000 and folio FB216 2-Turn tube on both sides using program #5000 and folio FB216 3-Blend transition lines using belt sander with 60 grit sand paper 4-SCRIBE PART NUMBER AS PER DWG

130 - PERFORME ULTRA SONIC MESURMENTS

150 - Grind machining marks smooth longitude way.

190 - LOCATION : LG003

Job BOM

Part / Item	Component Name	Quantity	Operation	Container
D6020-160	Crosstube Material	1 Ea (1 ea)	90-Start up Operation	B141822

Job Allocations

Operation	Component Part	Required	Inventory	Allocated
90-Start up Operation	D6020-160	1	50	0

Part Specifications

Specifications could not be found.

Plex 11/6/18 12:46 PM dart.white.jesse

**Container No: S130122****Part: D412-664-443TRN****Job No: 185906****Serial No/Batch: S130122****Revision: B****Inspector:****Exp Date:****Instructions:**

Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
CANADA
TEL.: 1 613 632-5200
Email: sales@dartaero.com
www.dartaerospace.com

Date: 11/21/18

(5)

DART AEROSPACE LTD	Work Order: 185906
Description: Crosstube Assembly (412 High Aft SS)	Part Number: D412-664-443
Inspection Dwg: D412-664-443 Rev: B	Page 1 of 2


FIRST ARTICLE INSPECTION CHECKLIST

Inspection Sheet Drawing Dimension	Tolerance	Actual Dimension	Accept	Reject	Method of Inspection	Comments
SIDE A	2.776	+0.005/-0.000	2.770	✓		
	2.776	+0.005/-0.000	2.779	✓		
	2.880	+0.005/-0.000	2.884	✓		
	2.990	+0.005/-0.000	2.995	✓		
	3.100	+0.005/-0.000	3.100	✓		
	3.250	+0.005/-0.000	3.255	✓		
	7.980	+/-0.060	7.985	✓		
	0.063	+/-0.010	0.063	✓		
	0.500	+/-0.010	0.500	✓		
	2.990	+0.005/-0.000	2.995	✓		
SIDE B	2.776	+0.005/-0.000	2.780	✓		
	2.776	+0.005/-0.000	2.780	✓		
	2.880	+0.005/-0.000	2.884	✓		
	2.990	+0.005/-0.000	2.995	✓		
	3.100	+0.005/-0.000	3.100	✓		
	3.250	+0.005/-0.000	3.255	✓		
	7.98	+/-0.060	7.983	✓		
	R0.06	+/-0.010	0.063	✓		
	R0.50	+/-0.010	0.500	✓		
	Ø2.990	+0.005/-0.000	2.995	✓		
	130.10	+/-0.060	130.120	✓		

5

DART AEROSPACE LTD	Work Order: 185 906
Description: Crosstube Assembly (412 High Aft SS)	Part Number: D412-664-443
Inspection Dwg: D412-664-443 Rev: B	Page 2 of 2

WALL THICKNESS MEASUREMENT

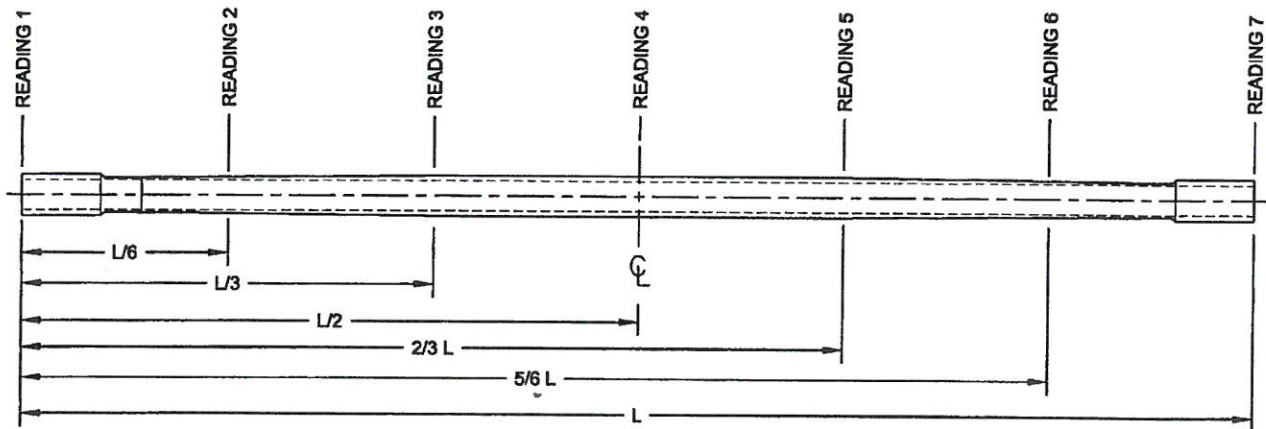

Location	WALL THICKNESS MEASUREMENT (IN)				Deviation Δw (max-min)	TOLERANCE
	w1	w2	w3	w4		
READING 1 L= 0"	.341	.336	.334	.339	.007	0.073"
READING 2 L= 21.68	.232	.225	.218	.225	.014	
READING 3 L= 43.37	.345	.347	.347	.345	.002	
READING 4 L= 65.05	.403	.482	.482	.483	.001	
READING 5 L= 86.73	.345	.344	.344	.345	.001	
READING 6 L= 108.42	.227	.223	.219	.223	.008	
READING 7 L= 130.10	.338	.338	.335	.335	.003	

Calibration Result

Actual Block Thickness: 200-500

Sitiescan 250 Measured Thickness: 200-500

Measured by: MD
Date: 2018-12-05

Audited by: DAS 67 9-89
Date: 2018-12-20

Preliminary Approval:
Date:

Rev	Date	Change	Revised by	Approved
A	14.06.24	New Issue (P/O D412-664-403)	KJ	
B	17.07.12	Dwg Rev updated	KJ	

Item	Qty	Part Number	Description
1	443		
1	X	D412-664-443	CROSSTUBE ASSEMBLY (412 HI AFT)
2	1	D6020-132	CROSSTUBE MATERIAL
3	2	D4910-1	CHAFING SHIELD
4	1	D5380-1	SUPPORT
5	1	D5380-3	SUPPORT BASE
6	4	MS21920-26	CLAMP
7	8	NAS1805-4P	NUT
8	8	NAS6704-21	BOLT
9	A/R	SCOTCH-WELD DP460	EPOXY ADHESIVE, 3M SCOTCH-WELD
10	A/R	PROSEAL 890 OR 1422	SEALANT

GENERAL NOTES:

- 1) MATERIAL: MANUFACTURED FROM D6020-132
- 2) FINISH: FINISHED LENGTH = 130.10x0.080 (BEFORE BENDING/TRIMMING)
PRIME INSIDE AND OUTSIDE PER DART QSI 005 4.1.4
APPLY WHITE CLEAR COAT TO UNDERSIDE OF CROSSTUBE PER DART QSI 005 4.2
MASK UNDERSIDE OF CROSSTUBE AS SHOWN (ZN C8-2, HATCHED AREA)
PAINT OUTSIDE PER DART QSI 005 4.2
AFTER PAINTING, REMOVE MASKING
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED.
- 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX.
- 6) IDENTIFICATION: SCRIBE DART PIN "D412-664-443" AND BIN ON INSIDE OF CUFF PER DART QSI 044 6.4 (VIBRATING STYLUS)
- 7) WEIGHT: 87.8 lb FINISHED WEIGHT
- 8) PART IS SYMMETRIC ABOUT CENTERLINE.
- 9) EXTREME CARE MUST BE TAKEN TO PROTECT THE OUTSIDE SURFACE OF THE TUBE. THE OUTSIDE SURFACE MUST BE SMOOTH AND FREE FROM SURFACE DEFECTS SUCH AS SCRATCHES, NICKS, OR DENTS. DEFECTS UP TO 0.005" MAY BE BLENDING OUT LONGITUDINALLY. CIRCUMFERENTIAL GRIND MARKS ARE UNACCEPTABLE.

BENDING

- 10) BEND PROGRESSIVELY WITH A MINIMUM OF 8 PASSES. MAXIMUM TUBE FLATTENING DUE TO BENDING IS 7% (BASED ON O.D.) IN LOWER HALF OF R35 BEND AND 6% (BASED ON O.D.) ON REMAINING TUBE.
- 11) LIQUID PENETRANT INSPECT OUTSIDE SURFACE OF CROSSTUBE PER QSI 038. TO BE PERFORMED AFTER FINAL POST-BEND GRINDING. ANY ADDITIONAL GRINDING REQUIRES ANOTHER LPI INSPECTION.


ASSEMBLY

- 12) LOCATE THE D5380-1/3 SUPPORTS ONTO THE CROSSTUBE AS SHOWN IN THE ASSEMBLY DETAIL.
- 13) ABRASE THE MATING SURFACES OF THE CROSSTUBE AND D5380-1/3 SUPPORT HALVES WITH 160-GRIT SANDPAPER. SATURATE CLEAN CLOTH WITH MEK, 4105S WASHNWIPE DEGREASER OR EQUIVALENT AND WIPE CLEAN UNTIL THERE IS NO RESIDUE.
- 14) APPLY 0.04" TO 0.07" THICK LAYER OF 3M DP460 ADHESIVE ONTO THE CONCAVE SURFACE OF THE D5380-1 SUPPORT AND THE D5380-3 SUPPORT BASE.
- 15) INSTALL D5380-1 SUPPORT ONTO THE CROSSTUBE AS SHOWN IN THE ASSEMBLY DETAIL AND INSTALL QTY (2) NAS6704-21 BOLTS INTO CORNER POSING CORNERS OF THE D5380-1 SUPPORT. ALIGN THE BOLTS WITH THE HOLES ON D5380-3 SUPPORT BASE AND TIGHTEN TO THE CROSSTUBE.
- 16) INSTALL THE REMAINING QTY (6) NAS6704-21 BOLTS AND QTY (8) NAS1805-4P NUTS, THEN EVENLY TORQUE THE NUTS IN A CRISS-CROSS PATTERN TO 80-70 IN.LBS. ENSURE A MINIMUM OF 1.5 THREADS ARE IN SAFETY.
- 17) WIPE OFF EXCESS ADHESIVE USING A CLEAN CLOTH SATURATED WITH MEK, 4105S WASHNWIPE DEGREASER OR EQUIVALENT.
- 18) ALLOW ADHESIVE TO CURE FOR 24 HOURS.
- 19) FILLET SEAL THE EDGES OF THE D5380-1/3 SUPPORT HALVES WITH PROSEAL PR1422 B1/2 OR PR890 B1/2 ALLOW PROSEAL TO CURE FOR 24 HOURS.
- 20) IF NOT ALREADY PRESENT ON D4910-1 CHAFING SHIELD, APPLY A 0.015" TO 0.020" THICK COAT OF PROSEAL 890/1422 ON INSIDE CONCAVE SURFACE OF D4910-1 CHAFING SHIELD AND LET CURE PER MANUFACTURER'S INSTRUCTIONS.
- 21) RECESS THE D4910-1 CHAFING SHIELD WITH 0.015" TO 0.020" OF PROSEAL 890/1422 AND IMMEDIATELY INSTALL ONTO THE CROSSTUBE. BE SURE TO ELIMINATE ANY AIR GAPS. ENSURE THE D4910-1 CHAFING SHIELDS ARE WRAPPED TIGHTLY.
- 22) TORQUE CLAMPS ON D4910-1 CHAFING SHIELD 40 TO 50 IN.LBS. ENSURE AT LEAST 1.5 THREADS SHOWING IN SAFETY AND THAT NUT HAS NOT BOTTOMED-OUT AFTER TORQUING. PRIOR TO PACKAGING, RE-CHECK TORQUE ON MS21920-26 CLAMPS AFTER ADHESIVES HAVE CURED FOR 24 HOURS.


RELEASED

2017 JUN 21 01
ECN 17-573


ADD ITEMS 4, 5, 7, AND 8. DELETED ITEMS D4909-1, MS21920-28 & D5395-063-530. NOTE 2 UPDATED FOR TUBE FINISH. ALL ASSEMBLY NOTES REWRITTEN. SHEET 2 SECTION A-A ANGLE DIM ADDED FOR CHAFING SHIELD INSTALLATION. ASSEMBLY DETAIL AND SECTION B-B UPDATED FOR INSTALLATION OF D5380-1/3.		AJS		16.11.03
REV.	NEW ISSUE	CP	BY	DATE
DESIGN	CP	DART AEROSPACE LTD		
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA		
CHECKED		DRAWING NO.	REV. B	
MFG. APPR.		D412-664-443	SHEET 1 OF 4	
APPROVED		TITLE	SCALE	
DE APPR.		CROSSTUBE ASSY (412 HI AFT)	NTS	
DATE	16.11.03	COPYRIGHT © 2011 BY DART AEROSPACE LTD		

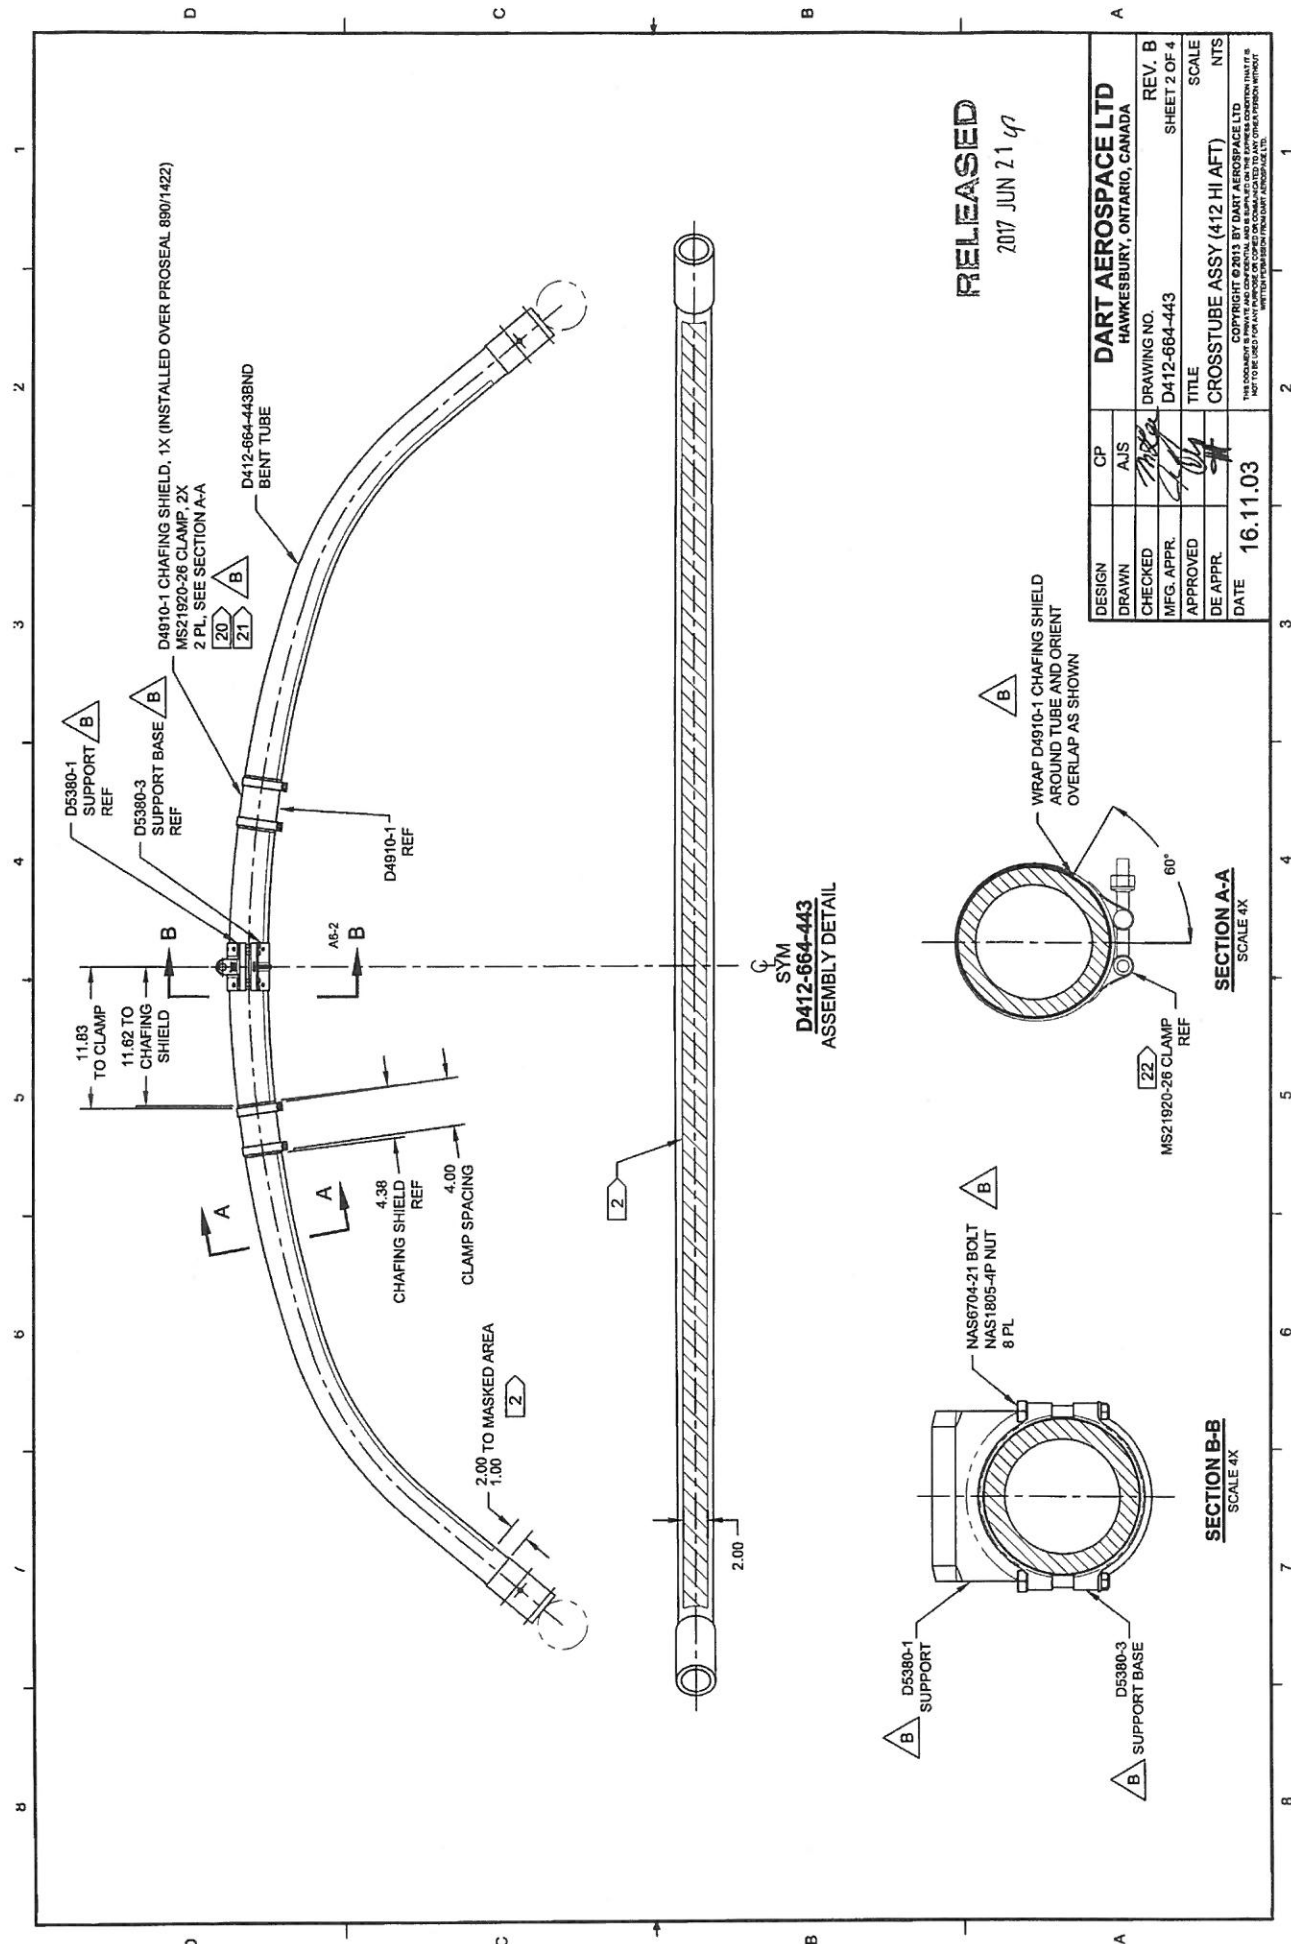

SYM
D412-664-443
ASSEMBLY DETAIL

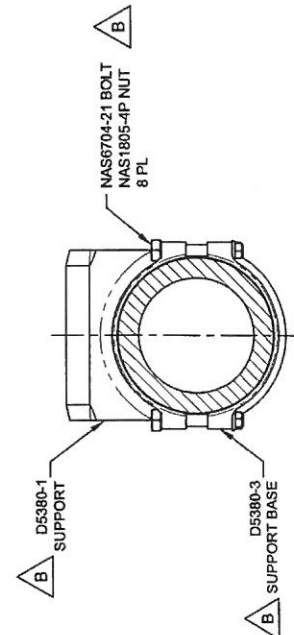

SECTION B-B
SCALE 4X

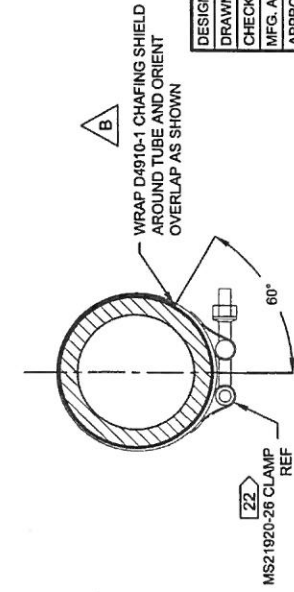


SECTION A-A
SCALE 4X


RELEASED
2017 JUN 21 47

DESIGN	CP	DART AEROSPACE LTD
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA
CHECKED		REV. B
MFG. APPR.		DRAWING NO. D412-664-443
APPROVED		SHEET 2 OF 4
DE APPR.		TITLE CROSS TUBE ASSY (412 HI AFT)
DATE	16.11.03	SCALE NTS

COPYRIGHT © 2013 BY DART AEROSPACE LTD
THIS DOCUMENT IS UNCLASSIFIED AND IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT THE WRITTEN PERMISSION OF DART AEROSPACE LTD.

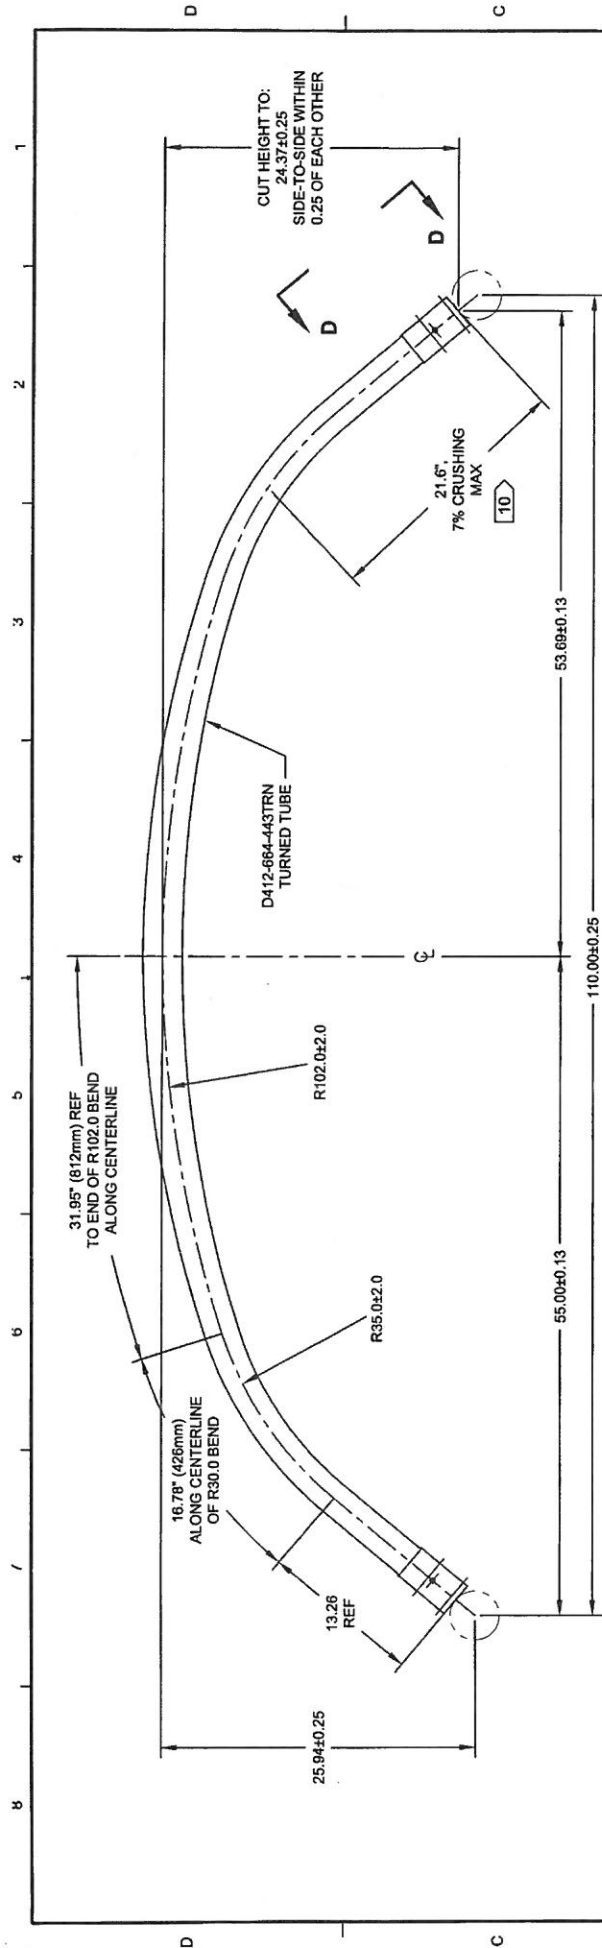

D412-664-443BND
BENDING DETAIL

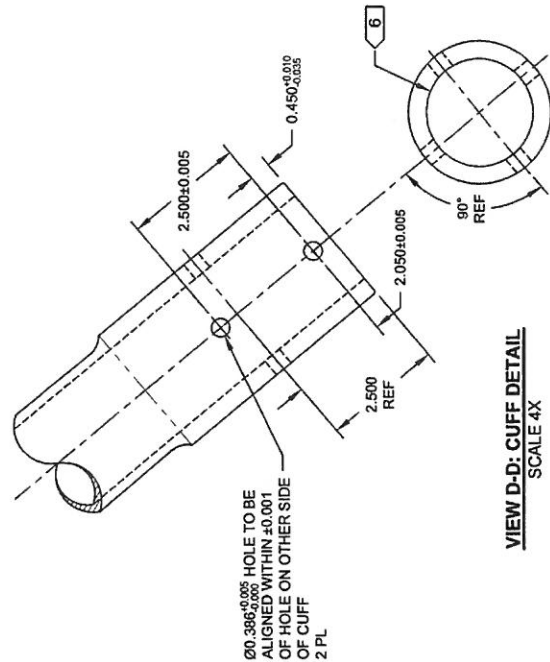

VIEW D-D: CUFF DETAIL
SCALE 4X

RELEASED
2017 JUN 21, 9

DESIGN	CP	DART AEROSPACE LTD
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA
CHECKED	<i>[Signature]</i>	DRAWING NO.
MFG. APPR.	<i>[Signature]</i>	D412-664-443
APPROVED	<i>[Signature]</i>	TITLE
DE APPR.	<i>[Signature]</i>	CROSSTUBE ASSY (412 HI AFT)
DATE	16.11.03	SCALE
		NTS

REV. B
SHEET 3 OF 4
COPYRIGHT © 2013 BY DART AEROSPACE LTD
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT BE
NOT REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, WITHOUT
WRITTEN PERMISSION FROM DART AEROSPACE LTD.

